

TUBE BIAS SETTINGS WITH AND WITHOUT AUDIO.

WHEN SAVE IS PRESSED THE VALUES ENTERED WILL BE SAVED TO THE TUBESYNC HARDWARE

IF TUBESYNC DETECTS A TUBE FAULT A COUNTER WILL BE INCREMENTED. WHEN INTERROGATED VIA THE 'BIAS RUNNER' THE TOTAL NUMBER OF FAULTS IS DISPLAYED. A RESET FUNCTION CAN BE PERFORMED BY AUTHORISED PERSONNEL

DISPLAYS THE HISTORY OF THE BIAS RUNNER ENTRIES

UNDER NORMAL CIRCUMSTANCES AUDIO THRESHOLD, FAULT TIMES AND FAULT CURRENTS SHOULD REMAIN AT THE FACTORY SET CONDITIONS AND SHOULD NOT BE MODIFIED.